



## Detailed Steps:


1. Open a web browser and go to <https://www.st.com/en/development-tools/stm32cubemx.html>
2. Click "Get Software" in the center of the webpage.

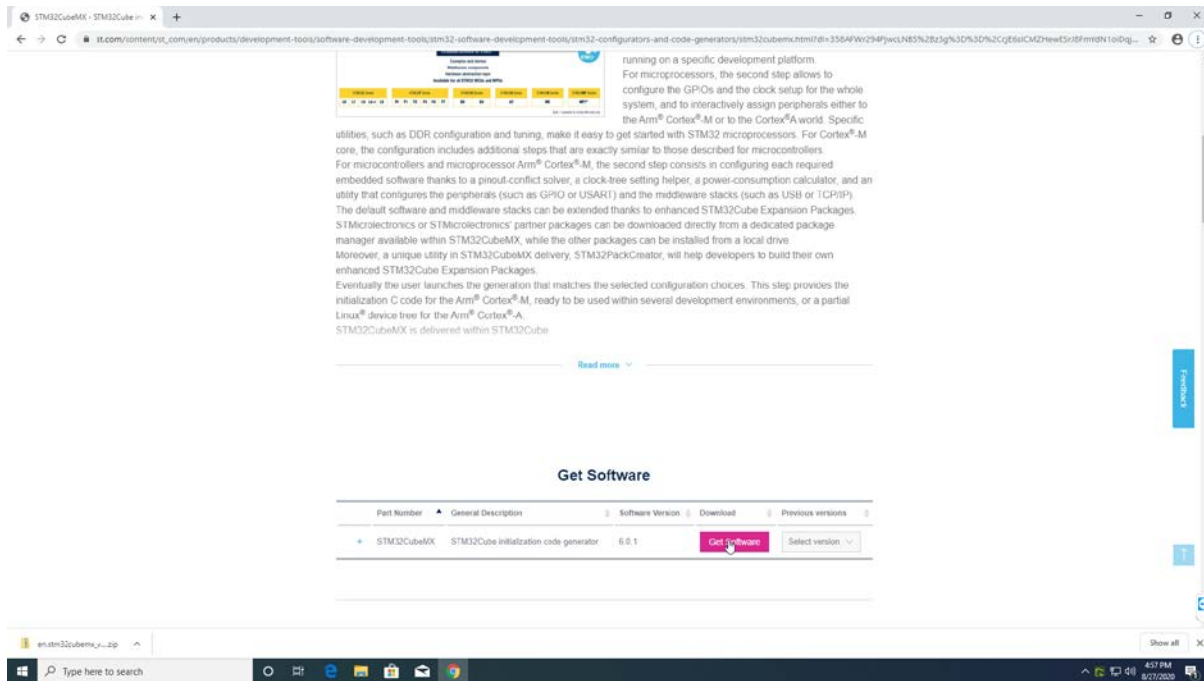


3. This will redirect you to the "Downloads Agreement" page, read this and then click "Accept".

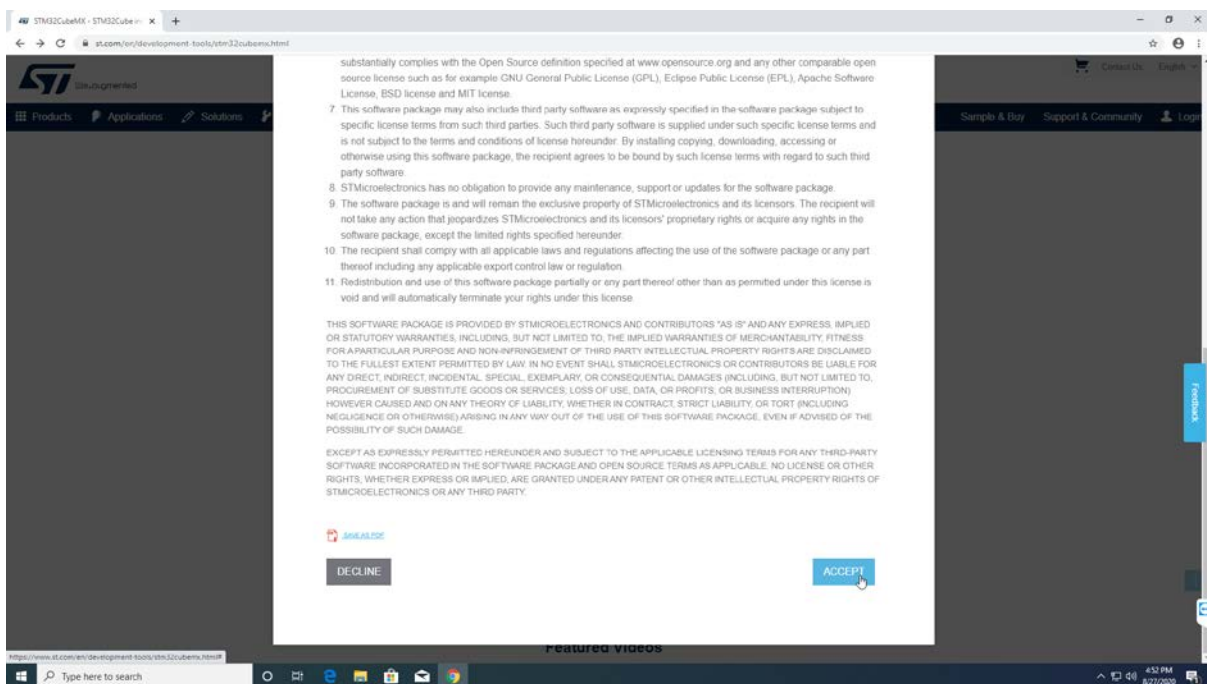


4. You will be asked to create an account if you don't have one after which you will then be emailed a link to download the software. Select "Download"

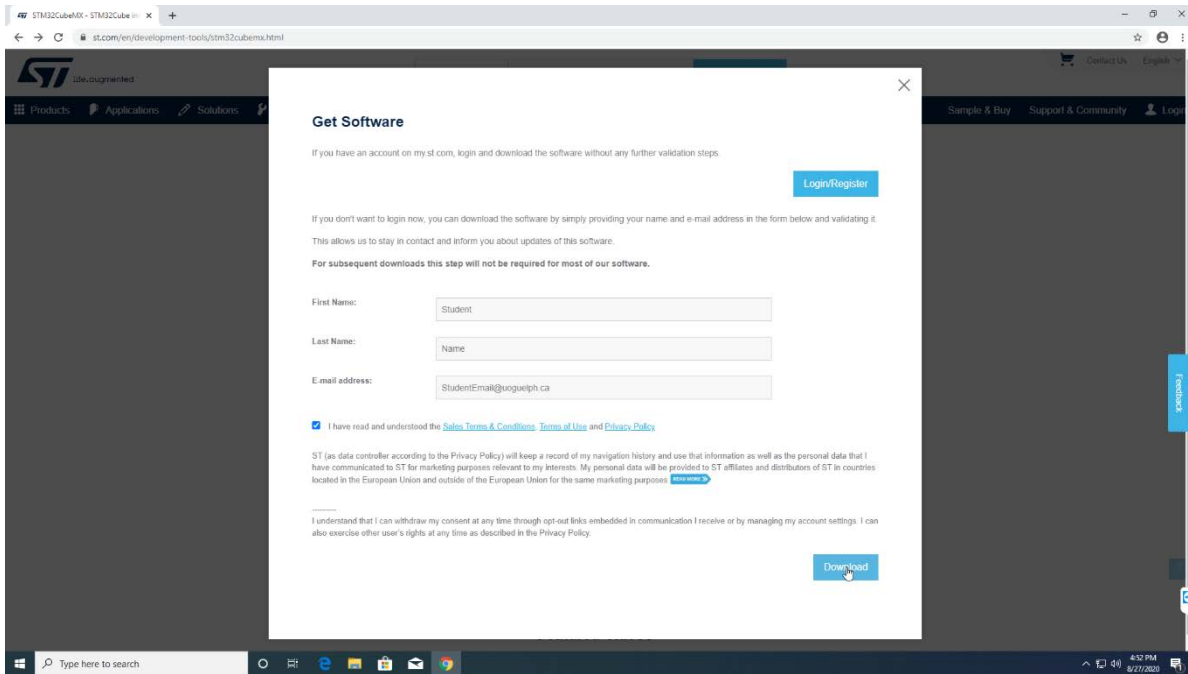


5. After the download finishes, navigate to your "Downloads" Folder, by clicking "Start" and the clicking "Documents"
6. Under Quick Access on the left hand side click "Downloads"
7. Right click on "en.stm32cubemx\_v6-0-0" and select "Extract All"

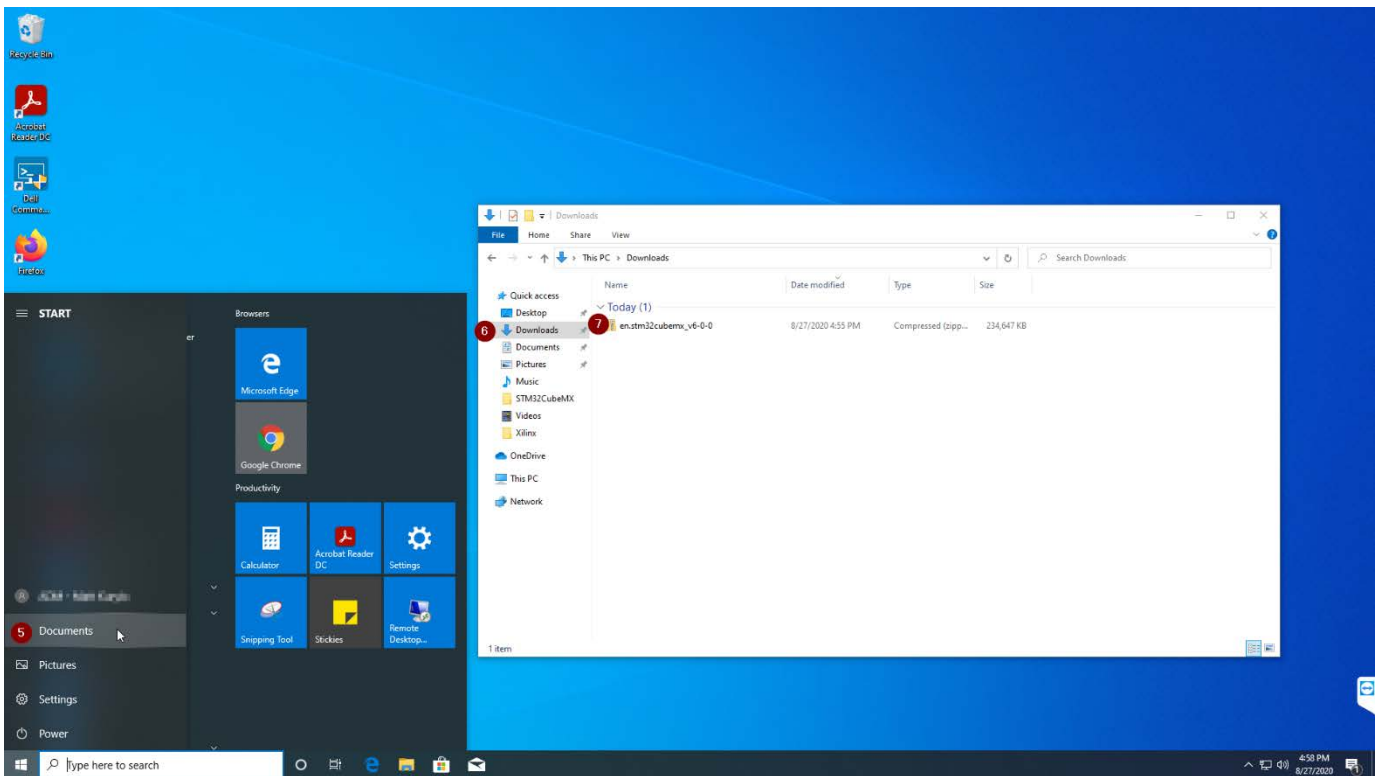


8. You will be greeted by the extraction screen. Click “Extract” to continue..

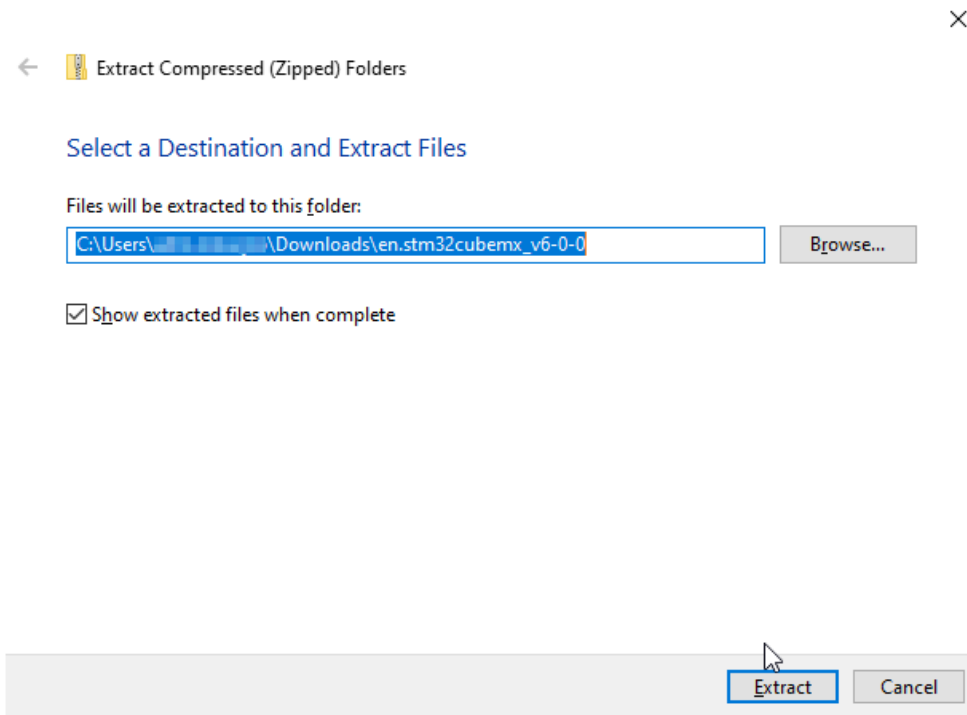


9. Click “Setup STM32CubeMX-6.0.0” to start your installation.

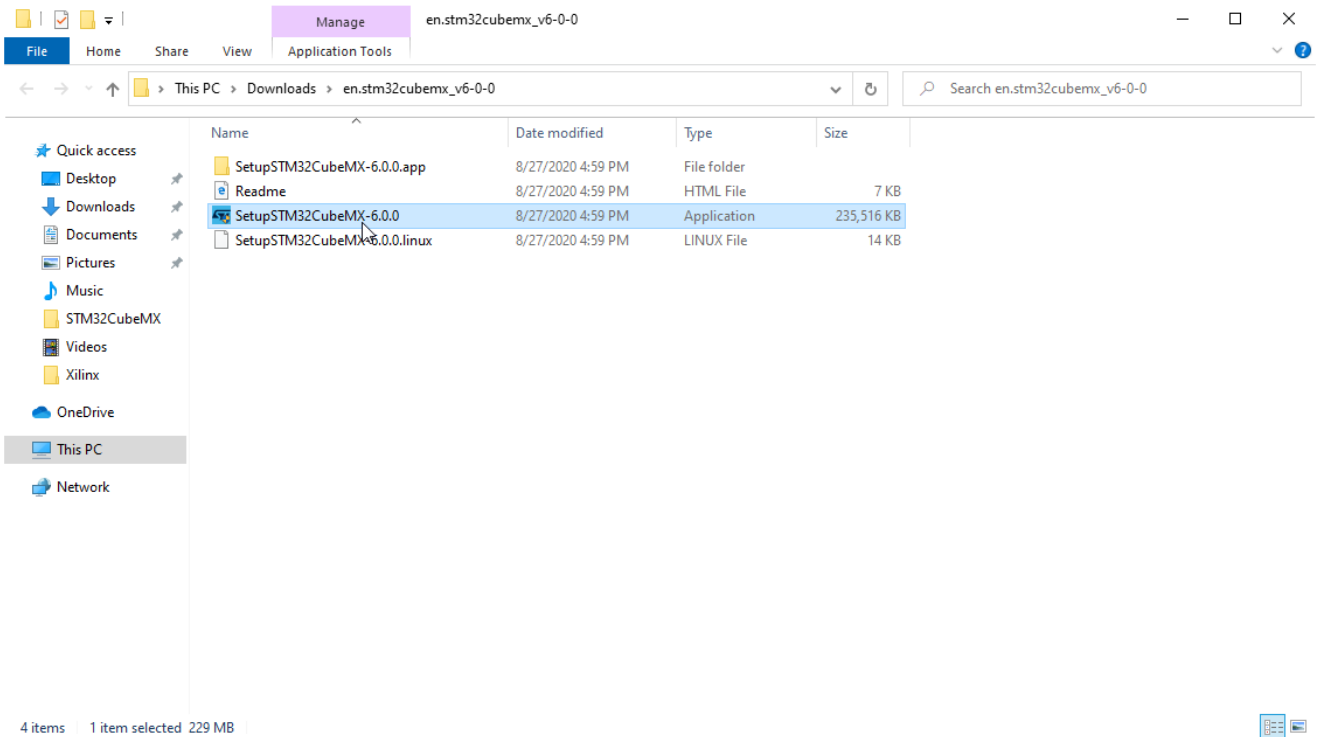


10. You will be greeted by the welcome screen, Click "Next"

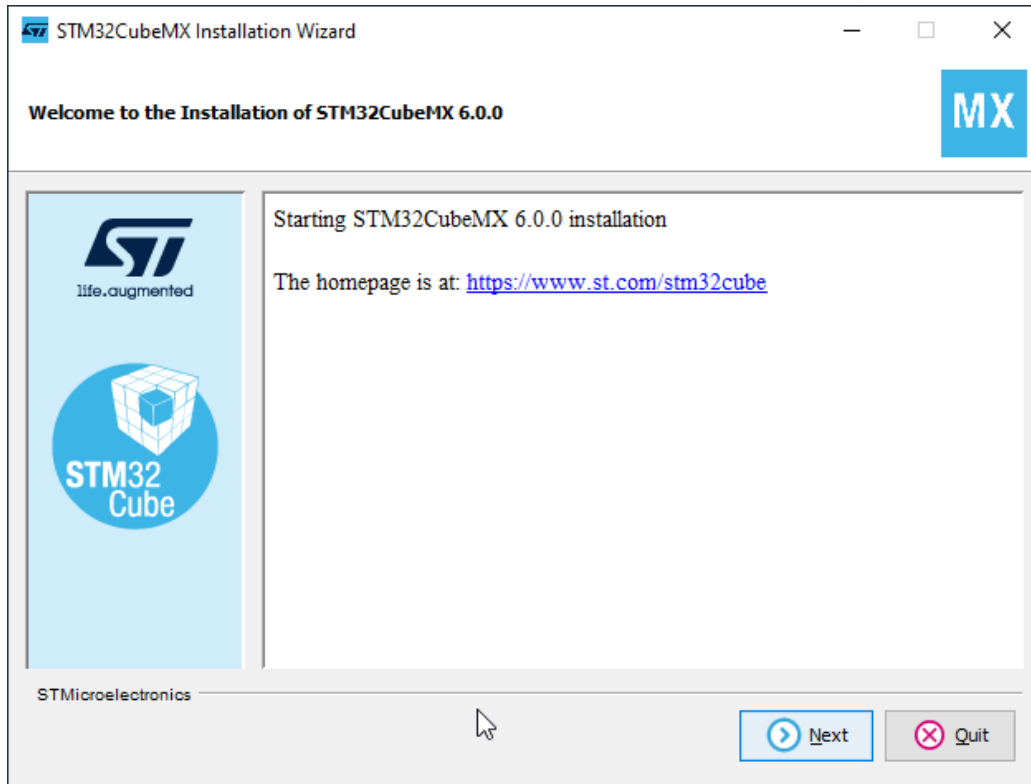


11. You will then be prompted with the "License Agreement" page, read the agreement and select "I accept the terms in the license agreement" and then click "Next" to continue

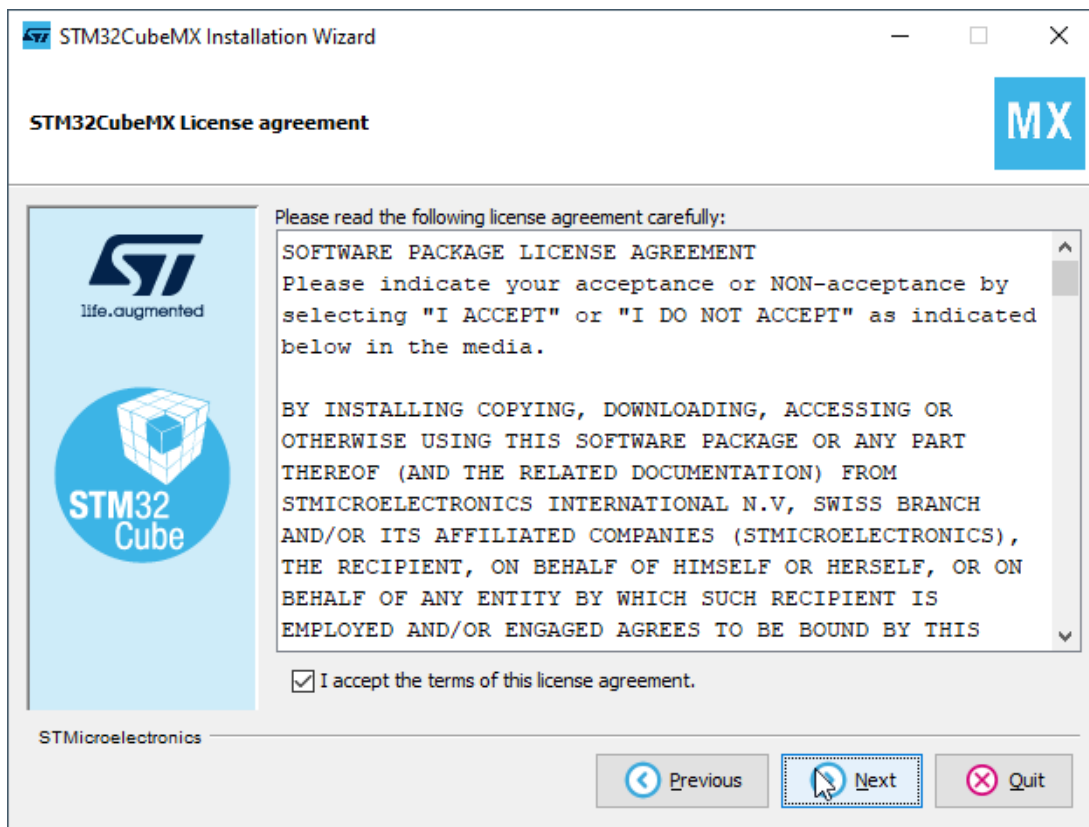


12. You will then be prompted with a “Terms of Use” screen. Read the policies and select “I have read and understood the ST Privacy Policy and ST Terms of Use.” then click “Next” to continue.

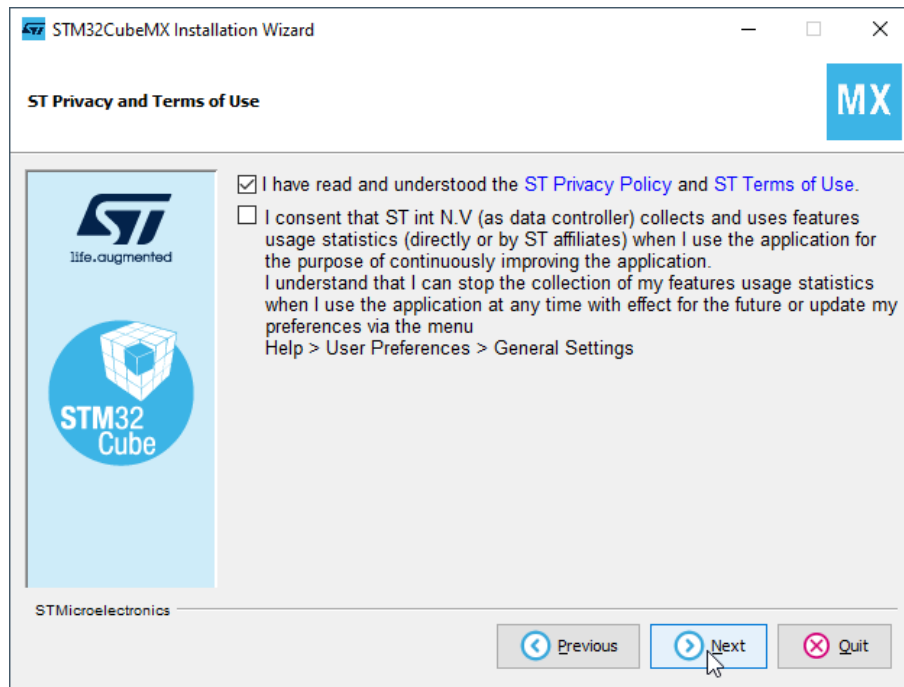

13. You will be greeted by the “Installation path” page. Leave these settings default and click “Next” to continue.

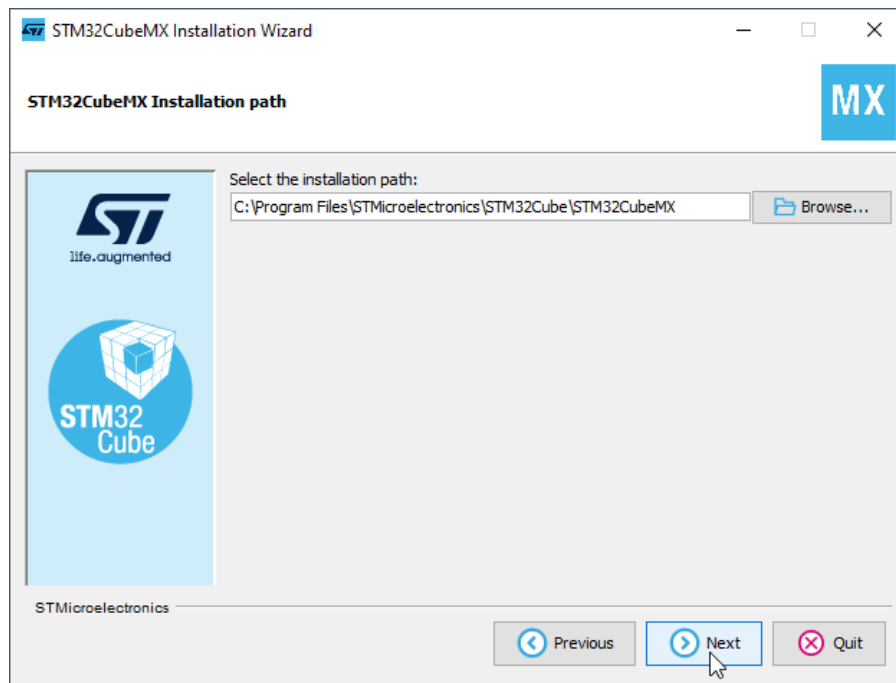

14. You will be greeted by the “Package installation” page. Once the installer is done click “Next” to continue.

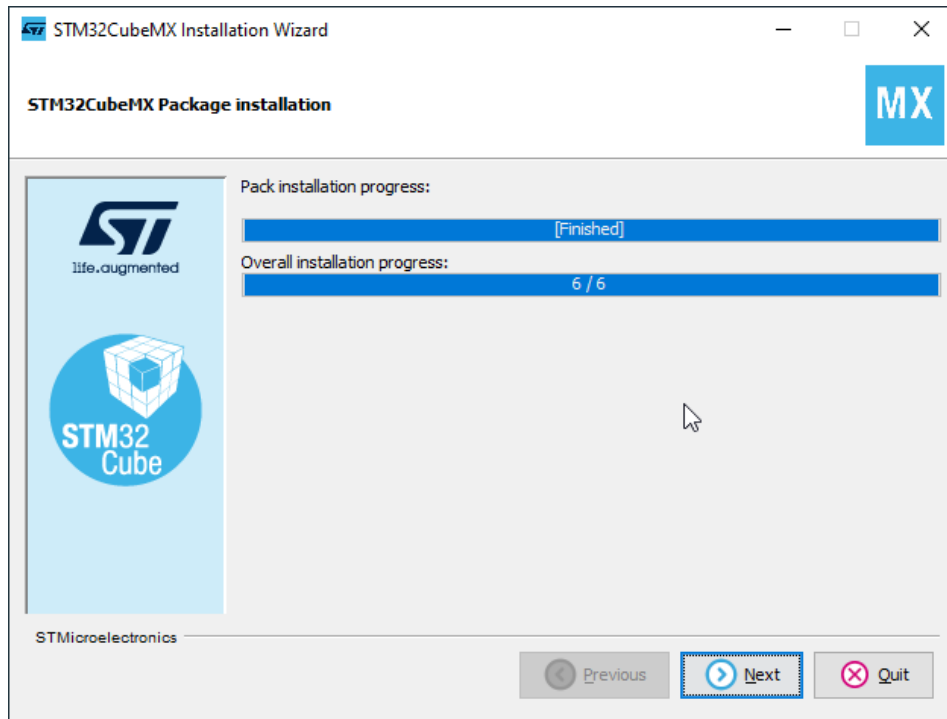

15. Click “Done”, you are now ready to use STM32CubeMX.

